




Upper Layer
Lower Layer

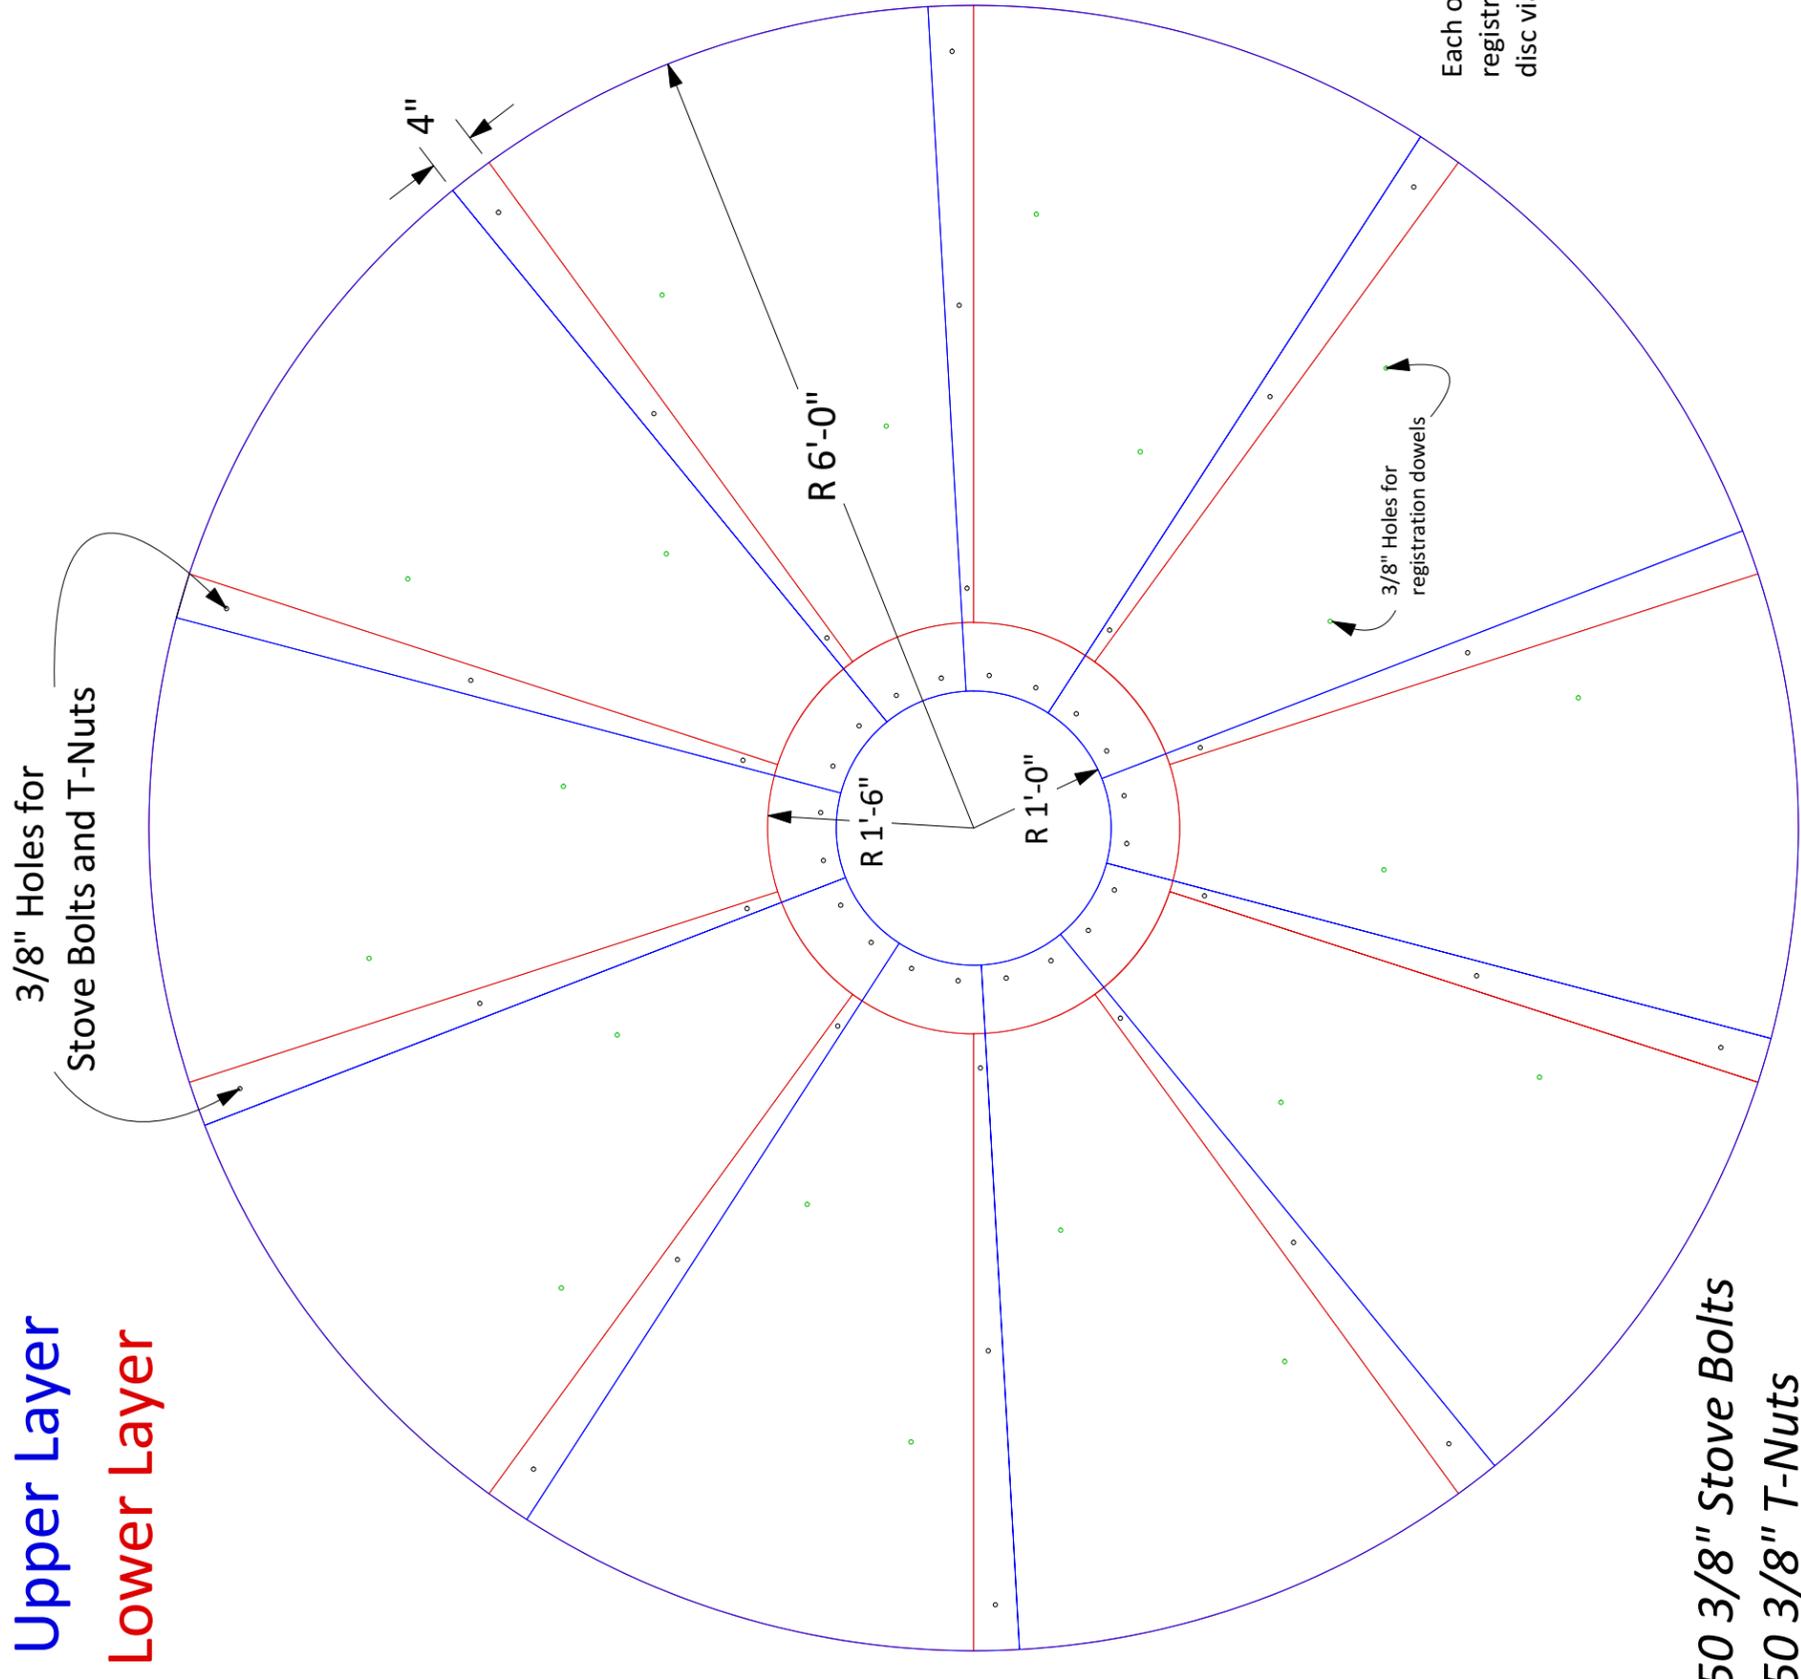

Cut 10

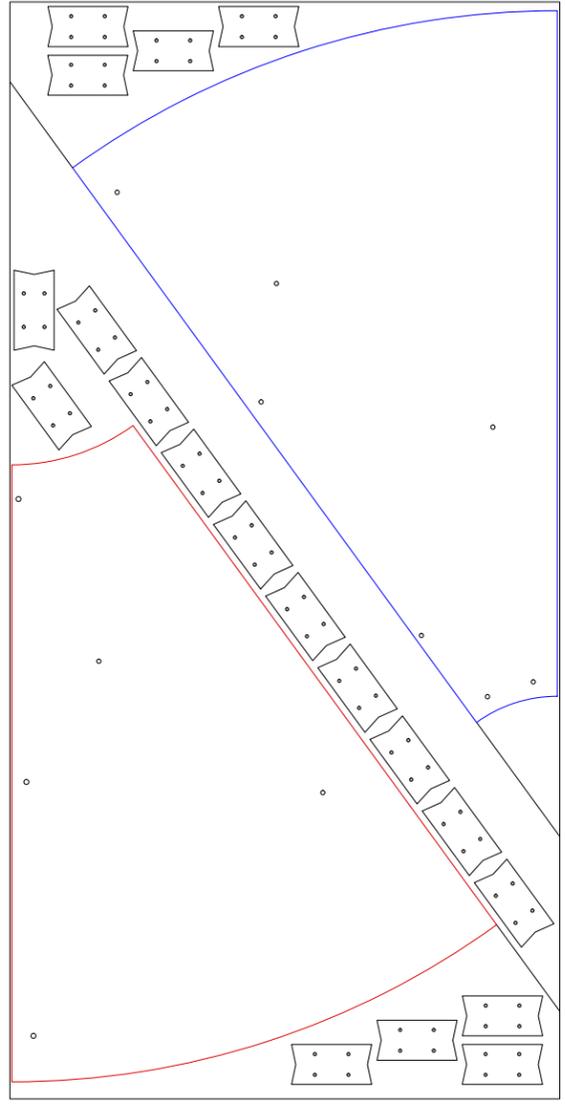

Cut 1

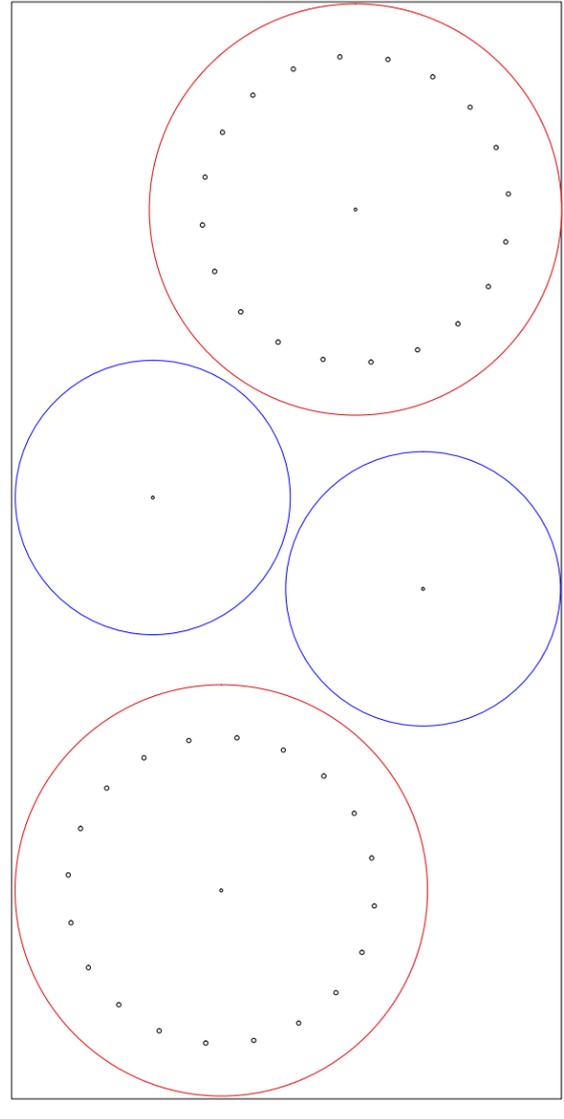

Each of the 10 wedges is 2 layers (3/4" AC plywood) thick. The layers are offset, with dowels for proper registration, glued and screwed together. Wedges are attached to each other and the lower inner disc via 3/8" stove bolts and t-nuts. Screw as necessary.

50 3/8" Stove Bolts
50 3/8" T-Nuts



Turntable Assembly Information	
Drawn by: Tom Hackman	Scene Designer: Owen Collins
Plate: T1	
Scale: 3/4"=1'-0"	Date: 12 Dec 18